

(2) Removing Control Lever Panel and Fuel Tank

Removing the Mower

1. Remove the mower.

9Y1210853TXS0014US0



Removing Seat and Step

1. Remove the seat with the seat base (1).
2. Remove the step (3).

- | | |
|-------------------------|----------|
| (1) Seat Base | (3) Step |
| (2) Control Lever Panel | |

9Y1210853TXS0015US0



Disconnecting Control Rods and Gas Springs

1. Disconnect the parts below on both sides:
 - Gas spring (1),
 - Control rod (2),
 - Couplers for neutral switches (3),
 - Relays (4) (only right side).
2. Remove the bolts (5) on both sides.
3. Remove the fender RH (6).
Remove the fender LH.
4. Remove the tank support (7).
5. Remove the control lever panel.
6. Remove the fuel tank (8).

- | | |
|--------------------|------------------|
| (1) Gas Spring | (5) Bolt |
| (2) Control Rod | (6) Fender RH |
| (3) Neutral Switch | (7) Tank Support |
| (4) Relay | (8) Fuel Tank |

9Y1210853TXS0016US0

