


## Group 2

## Disassembly

**SPECIAL TOOL:** Steering Wheel Puller  
(Code No. 07916-51090)

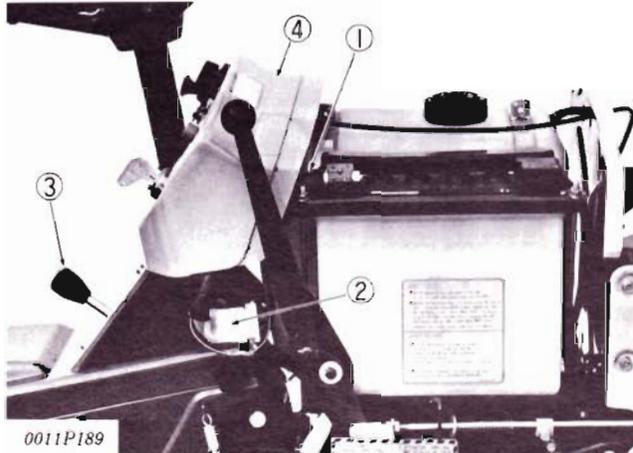

1. Negative Cord  
2. Coupler  
3. Speed Set Knob  
4. Cover

Fig. K-4

- (1) Disconnect the negative battery cord from the negative terminal.
- (2) Disconnect the coupler under the panel.
- (3) Remove the speed set knob.
- (4) Remove the four knob bolts and the cover.

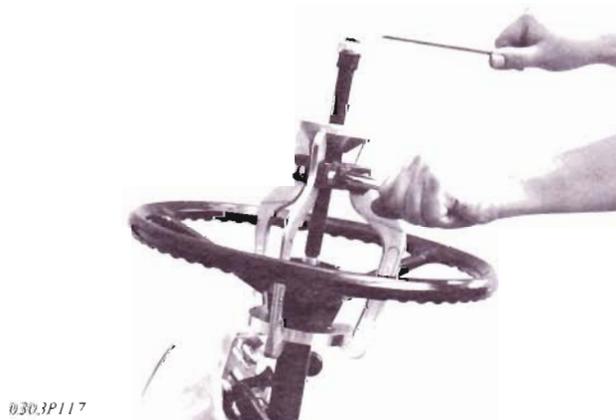


Fig. K-5 Removing Steering Wheel

- (5) Remove the steering wheel cap and loosen the the steering shaft nut.  
Set steering wheel puller on the wheel, and pull it out by screwing in the puller bolt and tapping the wheel with a hammer.



Fig. K-6 Steering Wheel Puller

- (6) Remove the four bolts holding the panel.

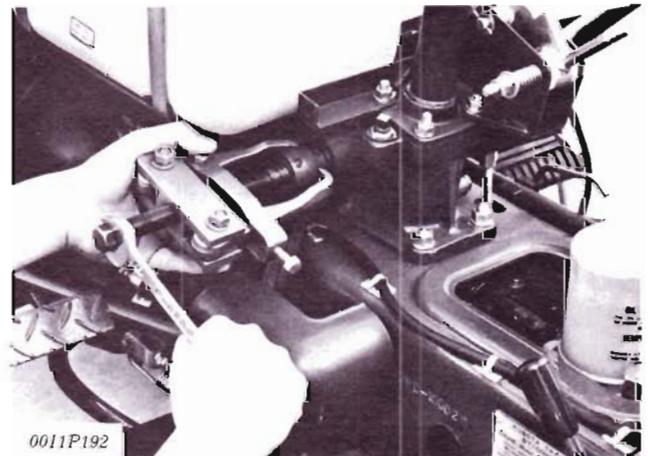


Fig. K-7

- (7) Remove the sector shaft nut and set pitman arm puller on the pitman arm which is attached to the sector shaft. Remove the pitman arm by screwing in the puller bolt and lightly tapping the arm with a hammer.