

(Every 200 Hours)

### Checking Fan Drive Belt Tension

See page S.G-7.

(5) Check Point of Every 300 Hours

### Changing Transmission Fluid


See page S.G-8.

### Replacing Transmission Oil Filter Cartridge only for HST



See page S.G-7.

### Changing Front Axle Differential Case Oil (4WD)


1. Remove the drain and filling port plug. After draining, replace the drain plug and fill with new oil.

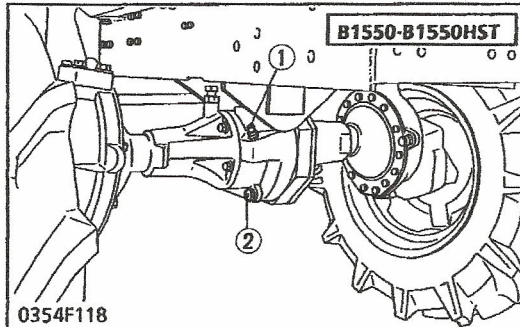

	B1550 B1550HST	B1750 B1750HST	B2150 B2150HST	Bi-speed turn
Front axle differential gear case oil capacity	0.5 ℓ 0.5 U.S. qts. 0.5 imp. qts.	1.5 ℓ 1.6 U.S. qts. 1.30 imp. qts.		2.5 ℓ 2.6 U.S. qts. 2.2 imp. qts.

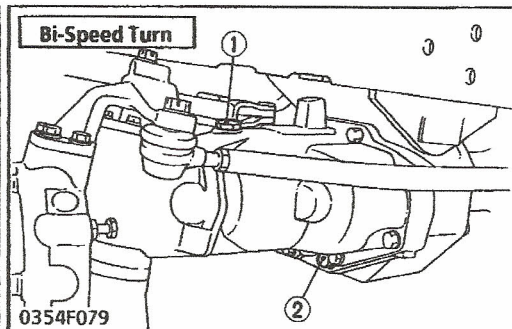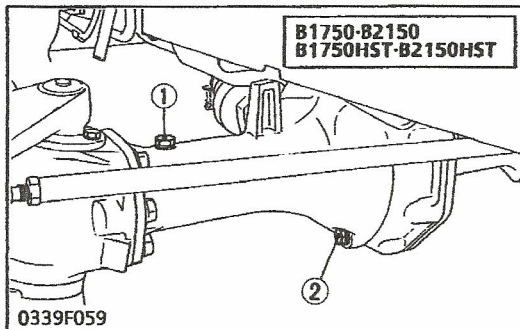

- (1) Filling Port Plug  
(2) Drain Plug

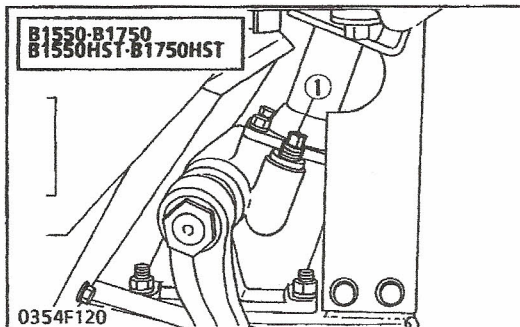




### Steering Gear Box Oil (Manual Steering)

1. If the oil is insufficient, fill with gear lube up to the oil inlet port (1).

Steering gear box oil capacity	0.2 ℓ 0.2 US qts 0.2 imp. qts
--------------------------------	-------------------------------------

- (1) Inlet Port

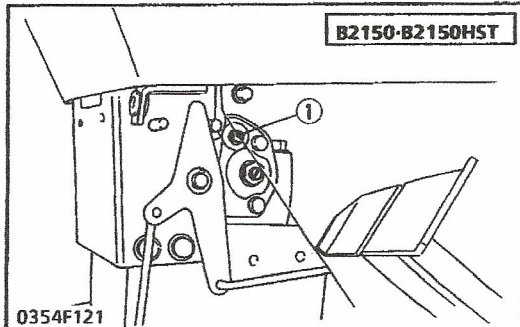

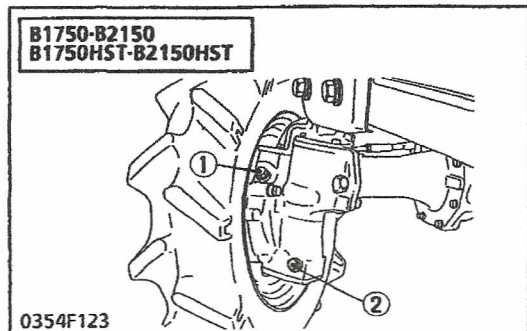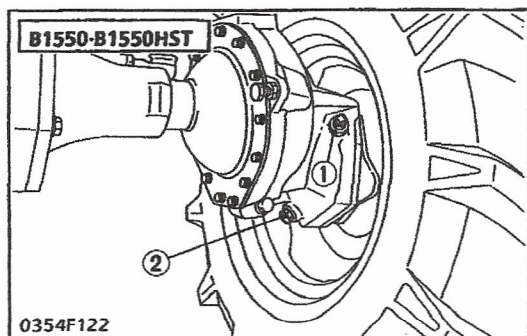**(Every 300 Hours)****Changing Front Axle Gear Case Oil (4WD)**

1. Remove the drain and filling port plugs. After draining, replace the drain plug and fill with new oil.


Front axle differential gear case oil capacity (Right or Left)	B1550 B1550HST	B1750, B2150 B1750HST, B2150HST
	0 15 ℓ 0.16 US qts 0.13 Imp qts	0.5 ℓ 0.5 US qts 0.5 Imp qts

(1) Filling Port Plug (Both sides)

(2) Drain Plug (Both sides)

**Cleaning Transmission Strainer**

See page S.G-8.

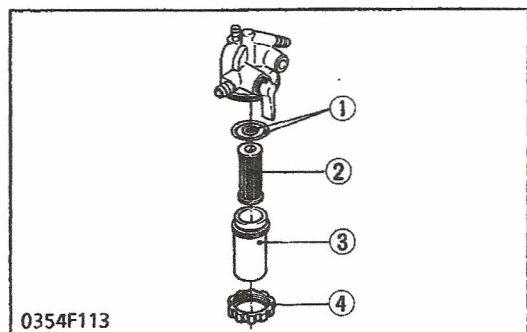**(6) Check Point of Every 400 Hours****Changing Fuel Filter Element**

1. The fuel filter element should be replaced every 400 hours.  
See page S.G-9.

(1) O-ring  
(2) Element(3) Filter Bowl  
(4) Screw Ring**(7) Check Point of Every 600 Hours, Every Year or Every 6 Times of Cleaning****Replacing Air Cleaner Element**

See page S.G-9.