

[3] ERROR LIST

- Error warning list

Display	Error
E:001	Meter CAN non-communication
E:005	High oil temperature
E:008	Fuel sensor error
E:009	Accelerator sensor error
E:010	Travel speed shift solenoid error
E:011	Parking brake solenoid error
E:012	Float solenoid error
E:013	Hydraulic lock release solenoid error
E:015	Hydraulic hitch solenoid error
E:016	AUX knob-switch error
E:018	AUX right solenoid error
E:019	AUX left solenoid error
E:020	Anti-stall solenoid error
E:021	5 V error
E:023	Over voltage
E:024	Hydraulic oil temperature sensor error
E:026	CRS CAN communication error
E:027	ACU CAN communication error
E:028	Breaking/short in foot accelerator
E:9116	Engine overheating
E:9118	Engine oil pressure error
E:9119	Battery charging error
E:9120	Water separator error

- Engine error warning list

- Use the engine diagnostic tool to check the details for engine error.

Display	Error	Display	Error	Display	Error
E:9000	Level 2 Regeneration request	E:9123	PCV error	E:9504	Tank leakage detected
E:9001	Level 3 Regeneration request	E:9124	PRV error	E:9505	SCR temperature sensor error
E:9002	Level 3 Regenerating	E:9125	HP5 system error	E:9506	CAN1 bus off communication error
E:9003	Level 4 Warning	E:9200	Air mass flow sensor system error	E:9507	CAN2 bus off communication error
E:9004	Level 5 Warning	E:9203	Intake throttle error	E:9508	NOx sensor CAN communication error
E:9006	Level 2 Inhibit warning	E:9204	Pressure differential sensor system error	E:9509	CAN receive data error
E:9007	Level 3 Inhibit warning	E:9205	Exhaust temperature sensor (DOC intake) error	E:9510	Urea injector error
E:9010	Engine stop to protect DPF (Stopping the engine for DPF)	E:9206	Exhaust temperature sensor (DOC outlet) error	E:9511	Suction line heater HT1 (S) error
E:9100	RPM sensor system error	E:9207	Exhaust temperature sensor (DPF outlet) error	E:9512	Delivery line heater HT3 (D) error
E:9101	Fuel/rail pressure system error	E:9208	Simultaneous disconnection of all exhaust temperature sensors error	E:9513	Return line heater HT (R) error
E:9102	SCV system error	E:9211	DOC reaction error	E:9514	Supply unit heater HT2 (E) error
E:9103	Intake temperature sensor system error	E:9212	DPF regeneration time up error	E:9515	Heater relay error
E:9104	Water temperature sensor system error	E:9213	Insufficient DPF regeneration/water temperature rise	E:9516	Tank heater coolant valve malfunction
E:9105	Fuel temperature sensor system error	E:9214	Regeneration too frequent	E:9517	Diesel Exhaust Fluid piping pump error
E:9106	Injector system error	E:9300	P/L valve opening error	E:9518	SCR purification system
E:9107	Intake pressure sensor system error	E:9301	Rail pressure error high pressure	E:9519	Diesel Exhaust Fluid tank quality sensor error
E:9108	Battery voltage error	E:9302	Fuel leak (high-pressure fuel system)	E:9520	Diesel Exhaust Fluid quality error
E:9109	Sensor voltage system error	E:9303	SCV sticking diagnosis	E:9521	Pre-NOx sensor
E:9110	Main relay system error	E:9304	Supply pump error (high-pressure)	E:9522	Post-NOx sensor
E:9112	Atmospheric pressure sensor system error	E:9305	Insufficient intake error	E:9523	Urea injection pressure detection
E:9113	EGR valve system error	E:9306	Turbo boost insufficient increase error	E:9524	5 V analog power supply
E:9114	EGR starting to close warning	E:9307	Exhaust temperature increase error T0	E:9525	System power supply
E:9115	Emissions warning (overheat)	E:9308	Exhaust temperature increase error T1	E:9526	ACU flash ROM
E:9116	Overheating	E:9309	Exhaust temperature increase error T2	E:9527	EGR system error
E:9117	Air heater system error	E:9310	Starter drive inhibit error	E:9550	Other SCR system-related error
E:9118	Engine oil hydraulic system error	E:9400	Other engine ECU, DPF	E:9600	Horsepower limit for pump protection
E:9119	Battery charging error	E:9500	Diesel Exhaust Fluid piping pressure sensor error	E:9601	Engine output limit
E:9120	Separator full of water warning	E:9501	Diesel Exhaust Fluid tank temperature sensor error	E:9602	Engine idling limit
E:9121	Engine ECU error	E:9502	Diesel Exhaust Fluid tank level sensor error		
E:9122	Communication error	E:9503	Tank level: Empty		