MAINTENANCE INTERVALS

RTV

RTV Utility Vehicles

Kubota

	Items
Engine oil	
Engine oil filter	
T/M fluid	
T/M oil filter (HST)	
T/M oil filter (Suction)	
Front axle case oil	

Does not apply									
	50	100	200	300	400	500	600	Interval	

RTV500										
NEW										
	50	100	200	300	400	500	600	Interval		
	Х		Х		Х		Х	every 200hrs		
	Х		Х		Х		Х	every 200hrs		
					Х			every 200hrs		
	Х		Х		Х		Х	every 200hrs		
	Х		Х		Х		Х	every 200hrs		
					Х			every 400hrs		

RTV		RTV900 - RTV1100									RTV	900	(200	9) - F	RTV1	100	(200	9) -	RTV1140
					-		-		-	-					N	EW		-	-
Items			50	100	200	300	400	500	600	Interval		50	100	200	300	400	500	600	Interval
	Ī		Х	Х	Х	Х	Х	Х	Х	every 100hrs		Х		Х		Х		Х	every 200hrs
			Х		Х		Х		Х	every 200hrs		Х		Х		Х		Х	every 200hrs
			Х		Х		Х		Х	every 200hrs						Х			every 400hrs
			Х		Х		Х		Х	every 200hrs		Х		Х		Х		Х	every 200hrs
			Х		Х		Х		Х	every 200hrs		Х				Х			every 400hrs
					Х		Х		Х	every 200hrs				Х		Х		Х	every 200hrs
							Х			every 400hrs						Х			every 400hrs

	Items
Engine oil	
Engine oil filter	
T/M fluid	
T/M oil filter (HST)	
T/M oil filter (Suction)	
Front axle case oil	

Engine oil

Engine oil filter T/M fluid

T/M oil filter (HST) T/M oil filter (Suction) Hydraulic oil filter Front axle case oil