

INSTALLATION MANUAL

BX2015 CONTROL VALVE KIT

for KUBOTA BX1800D and BX2200D TRACTORS

This control valve has a two-stage dump position. The first dump position (by moving the lever to the right) is the "Regular" dump position. It has good power and control for dumping precisely. This position should be used when operating another implement with this control valve.


The second dump position (to further right) features greater speed for dumping. These two positions are separated by a "Feel" position for your convenience.

SUITABLE TRACTOR

BX1800D / BX2200D

PRE-ASSEMBLY

Remove all components from the kit. Referring to the illustration and part list, insure that all components have been included.

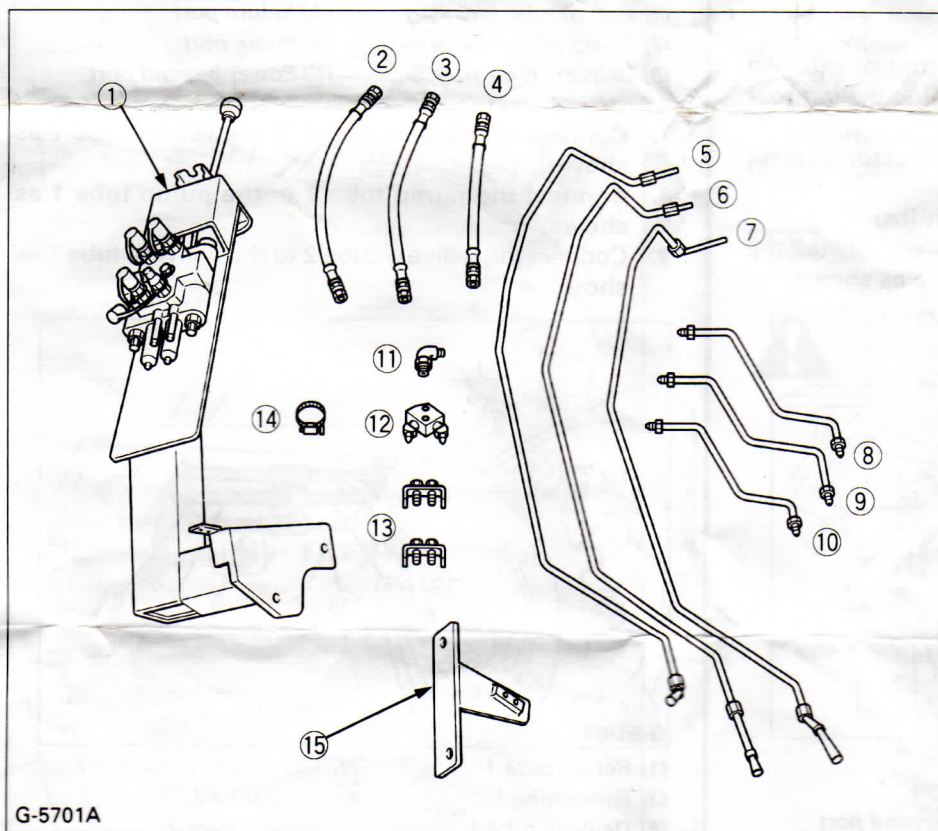

- (1) Valve frame assembly
- (2) Delivery hose, 495 mm (19.50 in.)
- (3) Return hose, 438 mm (17.25 in.)
- (4) Hose 10, Hydraulic (Pump hose), 376 mm (14.80 in.)
- (5) Delivery tube 1
- (6) Pump tube 1
- (7) Return tube 1
- (8) Return tube 2
- (9) Pump tube 2
- (10) Delivery tube 2
- (11) Adjustable elbow
- (12) Hydraulic block assembly
- (13) Tube clamps
- (14) Band
- (15) Tube support

G-5701A

TRACTOR PREPARATION

1. Remove the mid mount mower from the tractor.
2. Locate the tractor on a firm, flat and level surface.
Lower the implement to the ground, set the parking brake and stop the engine.