

— RELATED PAGE —

1.1 Lubricants, fuel, and coolant on page 2-7

1.4.2 Checking engine start system



WARNING

To avoid serious injury or death:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test, do not operate the tractor.

Preparation before testing


1. Sit on the operator's seat.
2. Set the parking brake and stop the engine.
3. Shift the range gear shift lever to the neutral position.
4. Check whether the speed control pedal is in the neutral position.
5. **Shift the PTO clutch lever to the off position.**

[Test 1] Switch for the speed control pedal

1. Make sure that the range gear shift lever is set in the neutral position.
2. Depress the speed control pedal.
3. Turn the key to the start position.
The engine must not crank.

[Test 2] Switch for the PTO clutch lever

1. Make sure that the range gear shift lever is set in the neutral position.
2. Make sure that the speed control pedal is set in the neutral position.
3. **Shift the PTO clutch lever to the on position.**
4. Turn the key to the start position.
The engine must not crank.

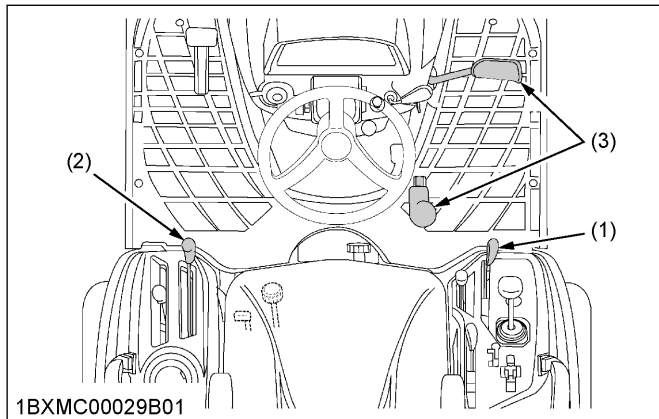

- (1) Range gear shift lever (Hi-Lo) (2) PTO clutch lever
(3) Speed control pedal

1.4.3 Checking operator presence control (OPC) system



WARNING

To avoid serious injury or death:

- Do not allow anyone near the tractor while testing.
- If the tractor does not pass the test, do not operate the tractor.

Preparation before testing

1. Sit on the operator's seat.
2. Set the parking brake and stop the engine.
3. Shift the range gear shift lever to the neutral position.
4. Check whether the speed control pedal is in the neutral position.
5. Shift the PTO clutch lever to the off position.

[Test 1] Switches for the operator's seat and the speed control pedal

1. Start the engine.
2. Depress the speed control pedal.
3. Stand up.

Do not get off the machine.


The engine must stop after approximately one second.

[Test 2] Switches for the operator's seat and the PTO clutch lever

1. Start the engine.
2. Engage the PTO clutch lever.
3. Stand up.

Do not get off the machine.

The engine must stop after approximately one second.

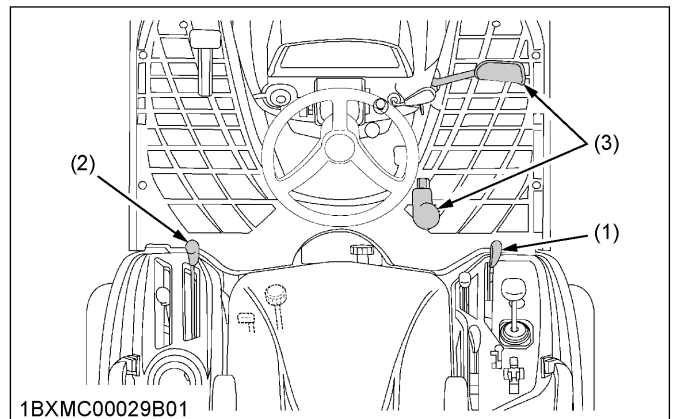

- (1) Range gear shift lever (Hi-Lo) (2) PTO clutch lever
(3) Speed control pedal

1.4.4 Checking wheel bolt torque



WARNING

To avoid serious injury or death: