

1. TROUBLESHOOTING

Symptom	Probable Cause	Solution	Reference Page
All Electrical Equipments Do Not Operate	Battery discharged or defective	Recharge or replace	9-S8
	Battery positive cable disconnected or improperly connected	Repair or replace	9-S7
	Battery negative cable disconnected or improperly connected	Repair or replace	9-S7
	Slow blow fuse blown	Replace	G-38, 39
Fuse Blown Frequently	Short-circuited	Repair or replace	–

W1014322

BATTERY

Battery Discharges Too Quickly	Battery defective	Replace	9-S7
	Alternator defective	Repair or replace	9-S17
	Wiring harness disconnected or improperly connected (between battery positive terminal and alternator B terminal)	Repair or replace	–
	Cooling fan belt slipping	Adjust tension	G-25

W1013580

STARTING SYSTEM

Starter Motor Does Not Operate	Battery discharged or defective	Recharge or replace	9-S8, 9
	Slow blow fuse blown	Replace	G-38, 39
	Starter relay defective	Replace	9-S35
	PTO switch improperly adjusted or defective	Repair or replace	9-S26
	Wiring harness disconnected or improperly connected (between main switch M terminal and PTO switch, between main switch ST terminal and PTO relay, shuttle neutral switch, between safety switch and starter relay, between starter relay and ground, between starter relay and starter motor S terminal, between battery positive terminal and starter motor B terminal)	Repair or replace	–
	Starter motor defective	Repair or replace	9-S15
	Main switch defective	Replace	9-S12, 13

W1011018

OPC

Buzzer Does Not Buzz	Fuse blown	Replace	G-38, 39
	Buzzer defective	Replace	9-S38
	Seat switch defective	Replace	9-S37
	Wiring harness disconnected or improperly connected	Repair or replace	–

W1013580