



12490F20050

Fuel Tank

1. Disconnect the fuel hose (1) at the fuel filter side, then drain fuel completely.
2. Remove the fuel tank frame stay (2).
3. Disconnect the hazard unit, starter relay and regulator connectors and remove the lead wire for fuel gauge.
4. Disconnect the overflow hoses (6) of fuel line.
5. Remove the tank frame (3) with fuel tank (4).
6. Remove the battery.
7. Disconnect the hydraulic pipes (7) and remove the battery stay with oil cooler (5).

NOTE

- For fastening hydraulic pipe nut, use two wrenches. Hold the fitting with a wrench, turn the pipe nut with another wrench to avoid damage at fitting installed part.

Tightening torque	Delivery pipe nut for HST	34.3 to 39.2 N·m 3.5 to 4.0 kgf·m 25.3 to 28.9 ft-lbs
	Oil cooler pipe nut	50.0 to 57.9 N·m 5.1 to 5.9 kgf·m 36.9 to 42.8 ft-lbs
	Delivery pipe nut for power steering	64.7 to 75.5 N·m 6.6 to 7.7 kgf·m 47.9 to 55.3 ft-lbs

- | | |
|--------------------------|--------------------|
| (1) Fuel Hose | (5) Oil Cooler |
| (2) Fuel Tank Frame Stay | (6) Overflow Hose |
| (3) Fuel Tank Frame | (7) Hydraulic Pipe |
| (4) Fuel Tank | |