


3RD FUNCTION (OPTION)

Here are the procedures that are related to assemble the 3rd function kit.

1. Removing the valve tank tube and inlet tube from the tractor.
2. Fitting the accompanying inlet 3rd tube, tank tube and power beyond tube to the tractor.
3. Connecting the tubes and hoses with the hydraulic valve.

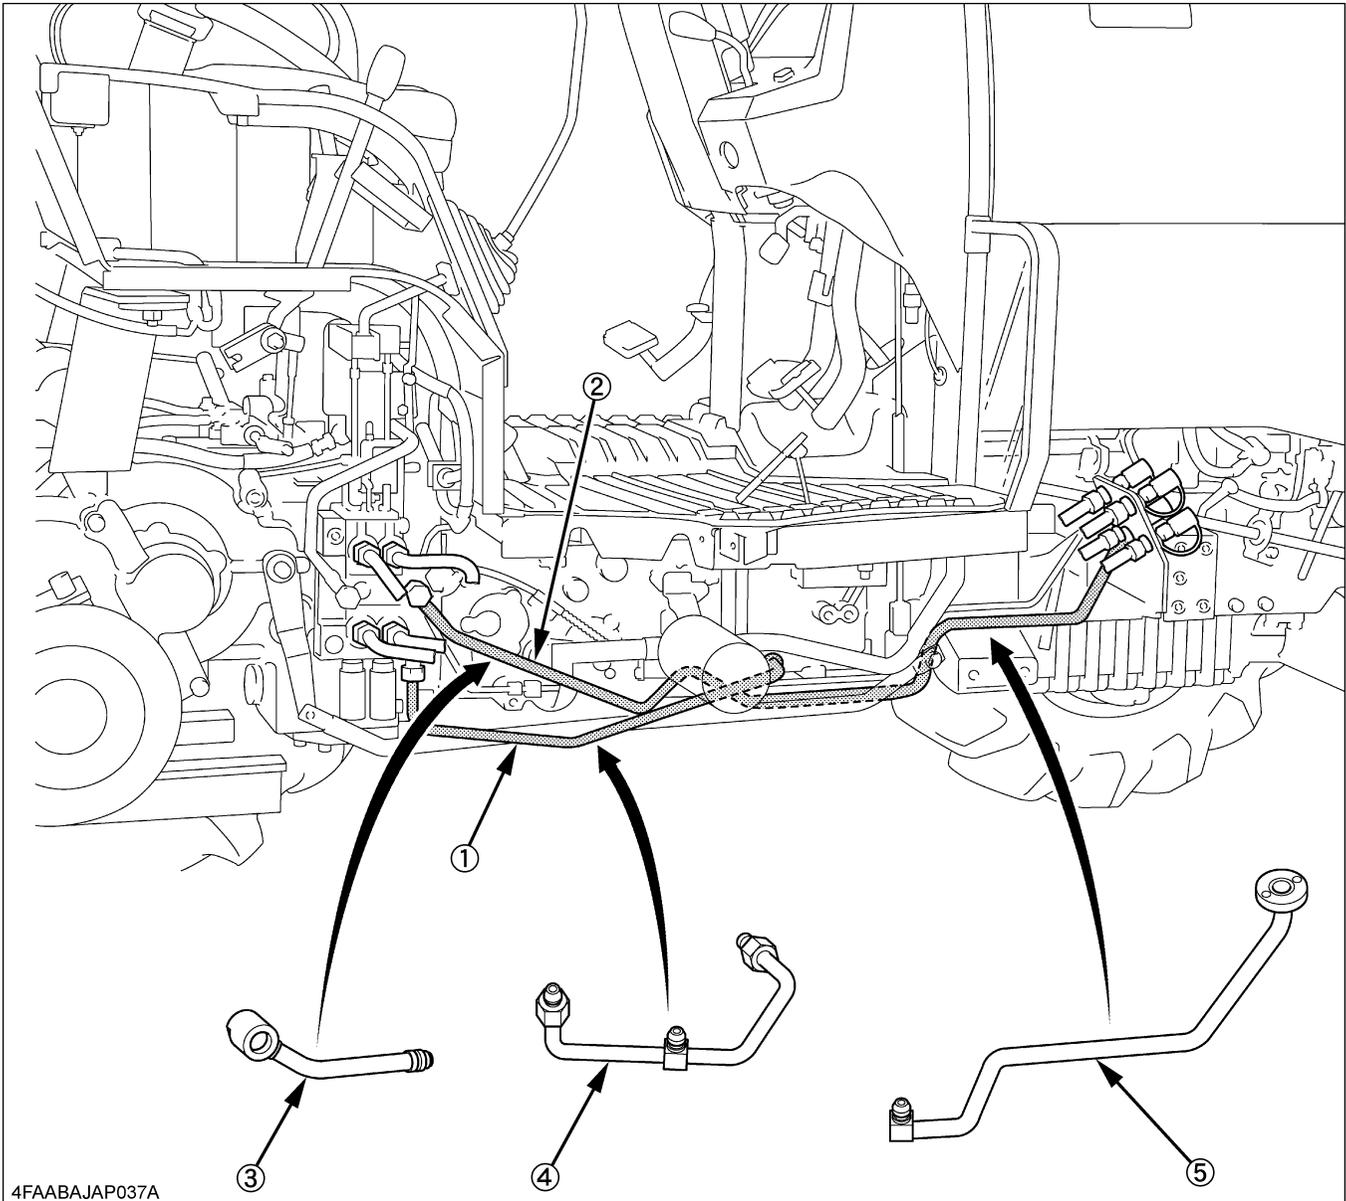

4FAABAJAP037A

- (1) Valve tank tube
- (2) Inlet tube
- (3) Power beyond tube
- (4) Tank tube
- (5) Inlet 3rd tube