

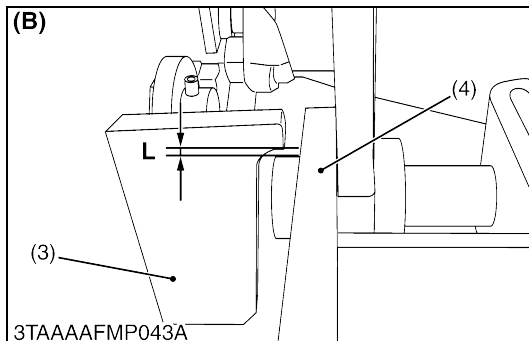


7. MOWER ADJUSTMENT

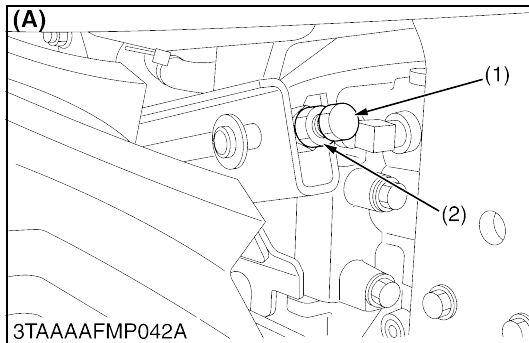

CAUTION

- Park the tractor on a firm, flat and level surface and set the parking brake.
- Stoop the engine, remove the key, and allow the blades to stop before making adjustments.
- Wear heavy gloves or wrap end of blade with a rag when you handle blades.
- Before starting the engine, set the PTO clutch lever to off position and range gear shift lever to the neutral position.

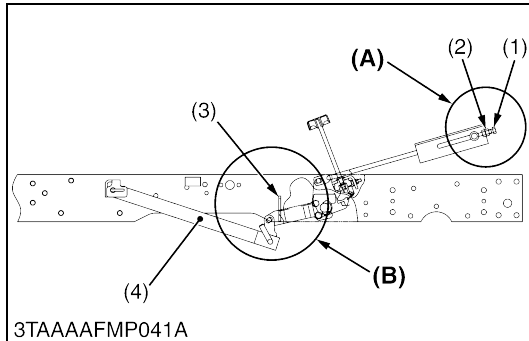

Adjusting Mower Link

1. Tire pressure must be correct.
2. Move the hydraulic control lever rearward to raise the mower to the highest position.
3. Stop the engine and remove the key.
4. Adjust the left side links with bolt so that the clearance **L** is as follows.

Clearance (L) between stopper and rear link	Factory spec.	0 to 0.5 mm 0 to 0.01 in.
---	---------------	------------------------------

- (1) Bolt
(2) Lock Nut
(3) Stopper
(4) Rear Link

L : 0 to 0.5 mm (0 to 0.01 in.)

(A) Adjustment Point

(B) Check Point

W8796512