


### 3. Steering wheel tilt lever [CAB type only]

#### **CAUTION**

To avoid personal injury:

- Do not adjust the steering wheel while the tractor is in motion.
- Make sure that the steering wheel is locked after adjusting.

Steering wheel is adjustable when the steering-wheel-tilt-lever is unlocked.

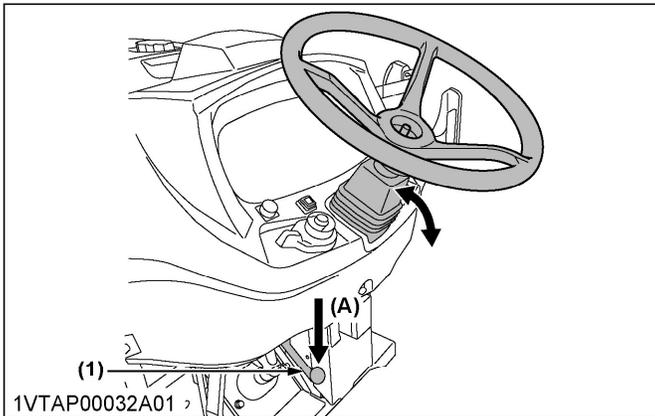

(1) Steering wheel tilt lever (A) Press down

### 4. Operator's seat


#### **WARNING**

To avoid personal injury or death:

- Adjust the operator's seat only while the tractor is stopped.
- Make sure that the operator's seat is completely secured after each adjustment.
- Do not allow any person other than the operator to ride on the tractor.

- **Travel adjustment**

Pull the travel-adjust-lever and slide the seat backward or forward, as required. The operator's seat will lock in position when the travel-adjust-lever is released.

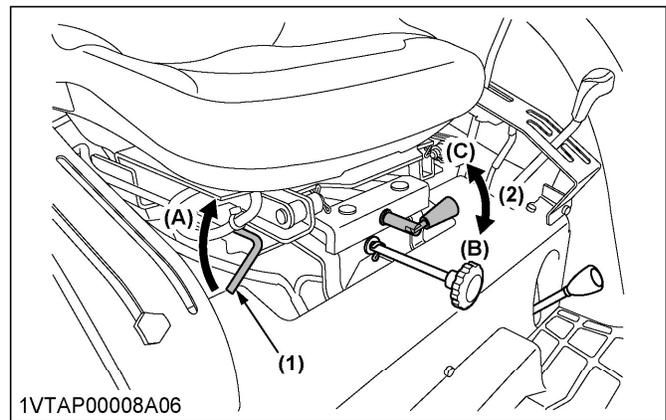

(1) Travel adjust lever (A) Pull  
(2) Suspension adjust lever (B) Increase tension  
(C) Decrease tension

- **Suspension adjustment**

Turn the suspension-adjust-lever to achieve the optimum suspension setting.

#### **IMPORTANT :**

- After adjusting the operator's seat, be sure to check to see that the operator's seat is properly locked.


### 5. Seat belt

#### **WARNING**

To avoid personal injury or death:

- Always use the seat belt when any ROPS or CAB are installed.
- Do not use the seat belt if a foldable ROPS is down or there is no ROPS.

Adjust the seat belt for proper fit and connect the buckle. This seat belt is auto-locking retractable type.

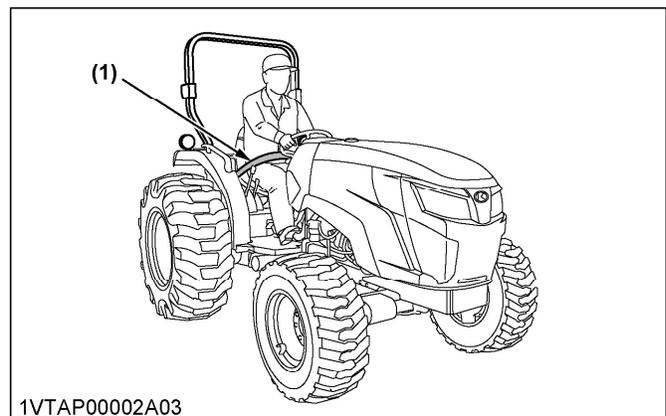

(1) Seat belt

### 6. Brake pedals (right and left)

#### **WARNING**

To avoid personal injury or death: