

- (2) If there is any flaw on the pressure plate, remove it with sandpaper or replace it.

Checking Clutch Pedal Free Travel

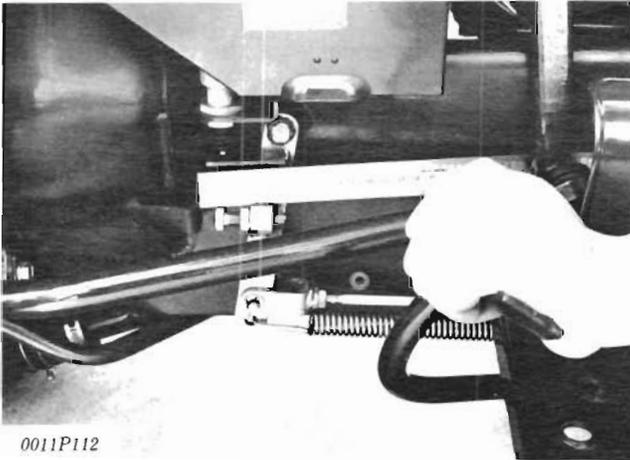


Fig. F-8 Checking Clutch Pedal Free Travel

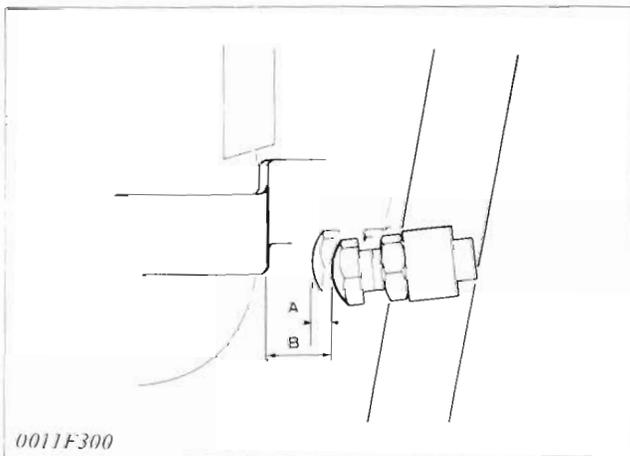


Fig. F-9 Checking Clutch Pedal Free Travel

- (1) Measure the free travel by pressing the pedal by hand.
- (2) Adjust by altering the length of the clutch rod.
 - Reference value
 - At the adjusting bolt: 2 to 4 mm
[A in Fig. F-9] (0.079 to 0.157 in.)
 - At the pedal edge: 15 to 30 mm
(19/32 to 1-3/64 in.)
 - Distance B between adjusting bolt and stopper: 11 mm
(0.433 in.)