
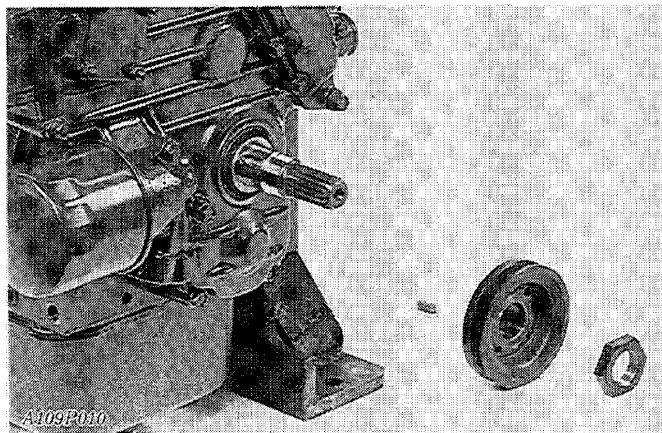


3 Detaching Start Spring

- 1) Remove the start spring from the gear case.

(A) How to remove start spring

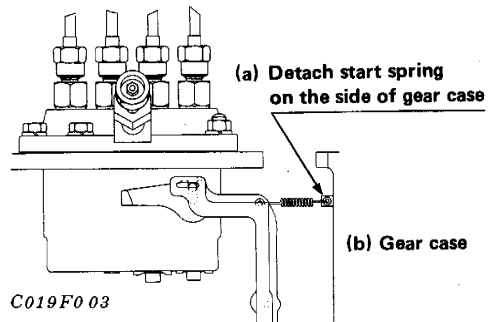

4 Removing Fan Drive Pulley

- 1) Remove the fan drive pulley.
- 2) Remove the key.