


[2] RANGE GEAR SHIFT SECTION AND FRONT WHEEL DRIVE SECTION

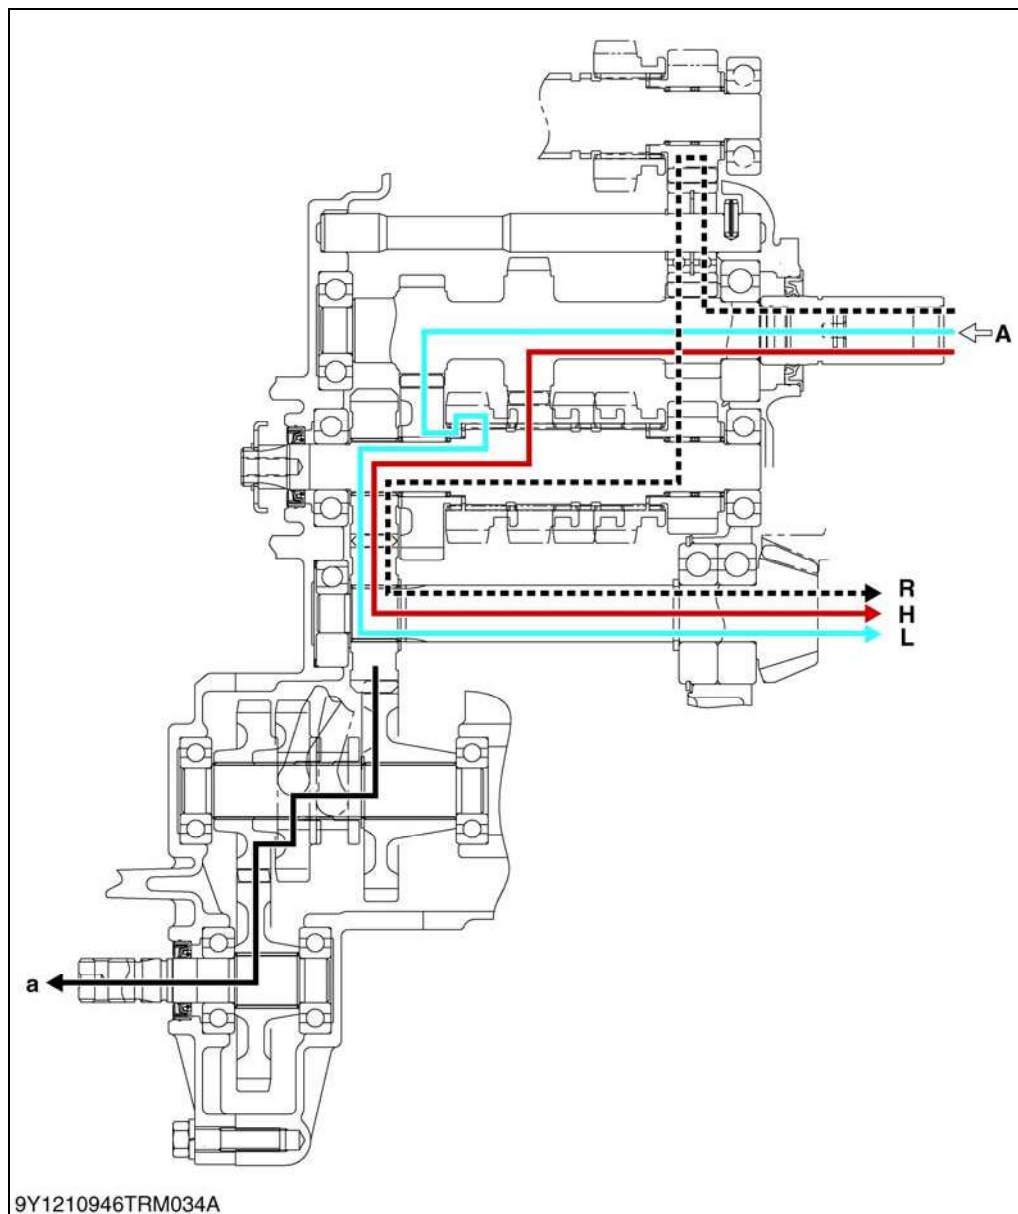

R: Reverse
L: Low Speed
H: High Speed
a: 4 Wheel Drive
A: From HST Output Shaft

9Y1210946TRM034A

■ Range Gear Shift Section

First, power is transmitted to the HST at the back of the transmission case. The HST power is then removed to the front and transmitted further to the range shift section.

The speed can be changed in 2 steps forward and in single step backward. The shifting is made through the cable linkage of the shift lever at the operator's seat. The speed change system is of constant mesh type.

■ Front Wheel Drive Section

This section is located near the range gear shift section. The front wheel drive select lever at the operator's seat is used to switch between the two wheel and four wheel drive. The front wheel drive select lever and the range gear shift lever are cable connected. Sliding gear system is adopted, in which the shifter gears are directly moved.

9Y1210946TRM0033US0