

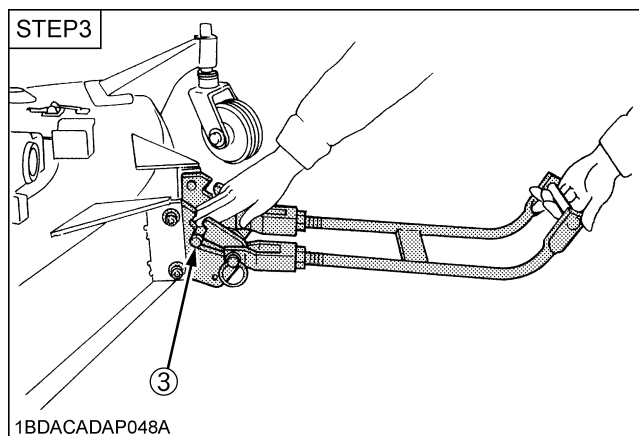
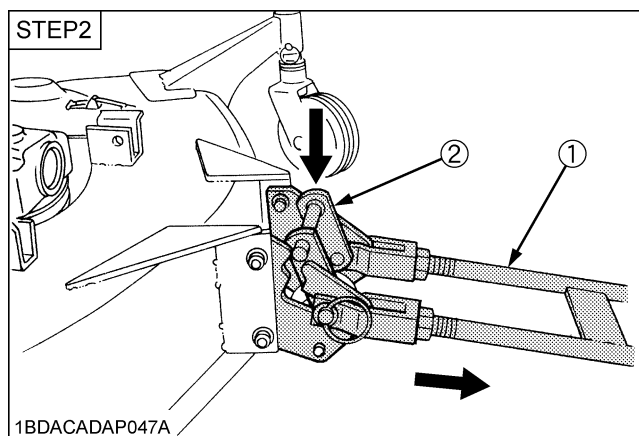


3. Return the steering wheel to center.
4. Hook the front link in the front bracket groove as shown.
Lock the link in the groove with the stopper.

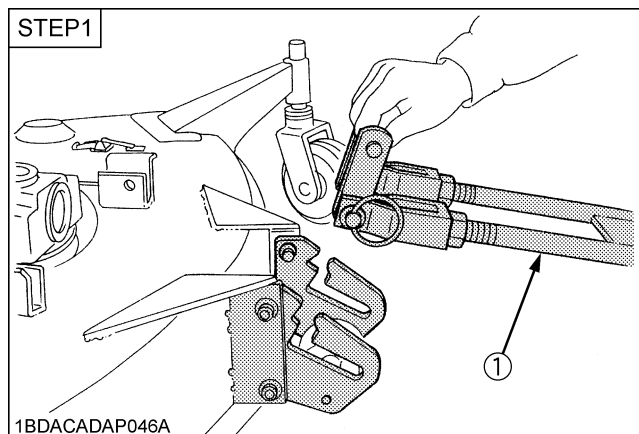

(1) Front link (2) Stopper (3) Front bracket groove

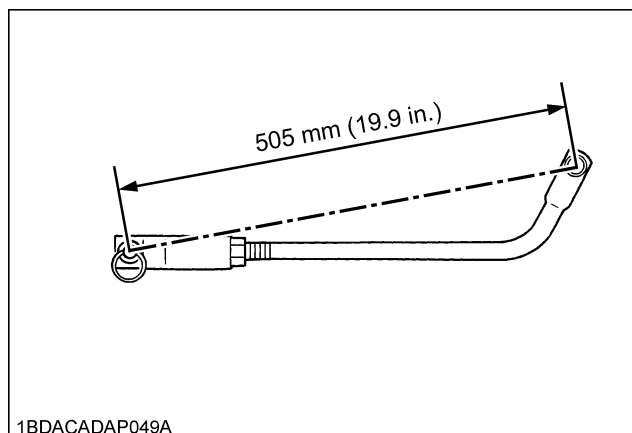


NOTE :

- Be sure to fit the stopper in the groove properly.
- Check that the length of the front link is 505 mm (19.9 in.).

[RC72-30B]

1. Attach the front link to the deck with clevis pins, plain washers and snap rings.

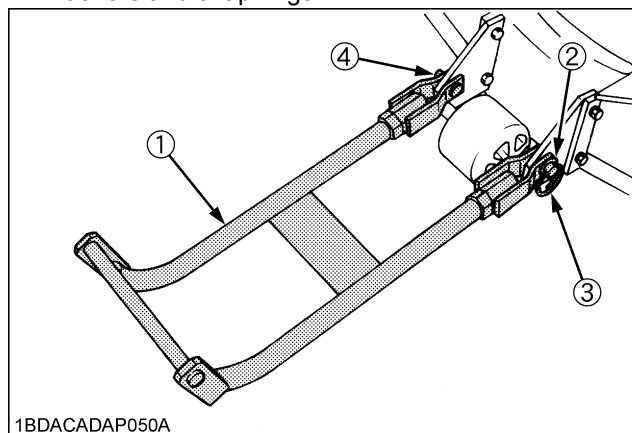

- (1) Front link
(2) Plain washer
(3) Snap ring
(4) Clevis pin

