


Photo 1-13

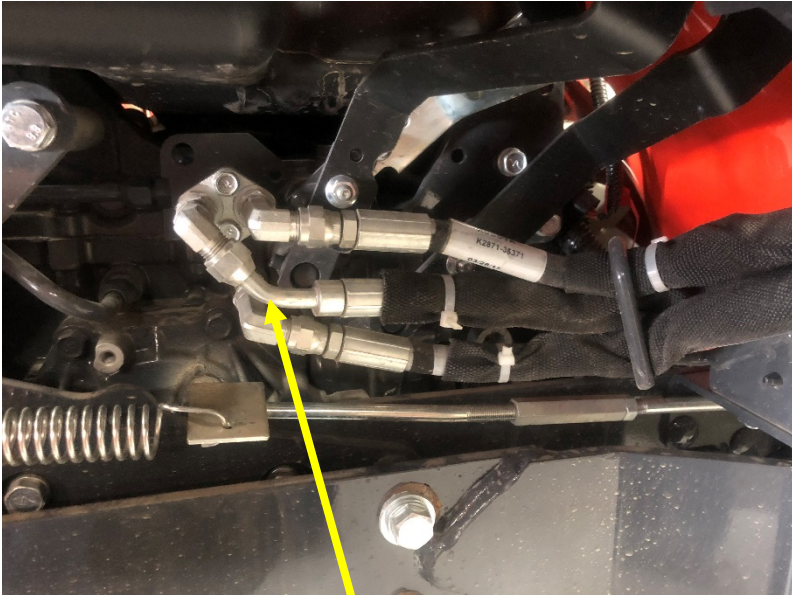

Remove hose

At the power beyond block (behind tire), remove line on back side. Attach 811-397C (45 Degree fitting) to the 90 degree elbow. Then attach 851-959C hose from the P Port.

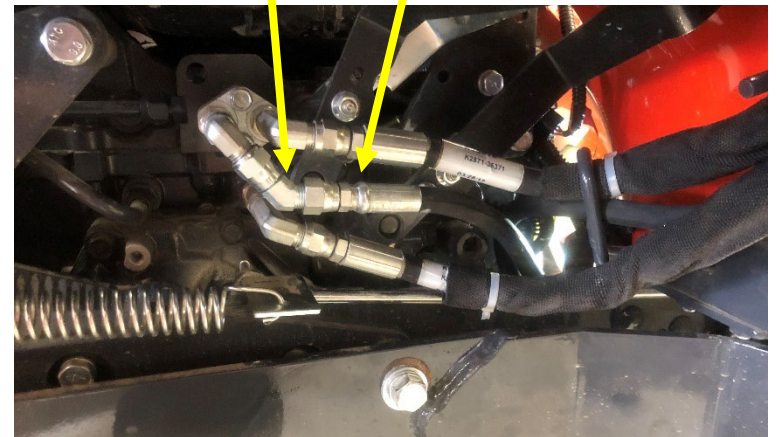


Photo 1-14