
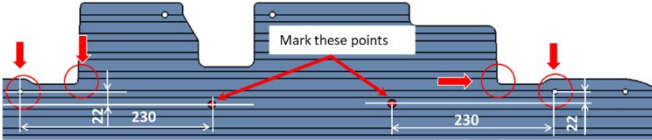
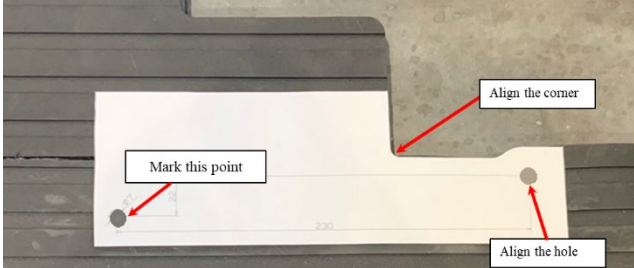
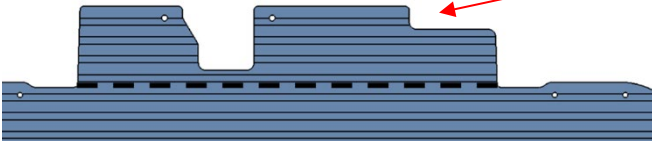


Procedure:



To avoid personal injury:

- Park the machine on firm and level ground and set the parking brake.
- Lower all attachments and implements to the ground.
- Set all controls in their neutral positions.
- Release all residual pressure of the hydraulic system.
- Stop the engine. Remove the key from the ignition.
- The engine, hydraulic components, and coolants can be hot. Wait until all the components are cooled down sufficiently to avoid burns.
- Clean the work area and machine.
- Disconnect the negative battery cable.
- Hang a "**DO NOT OPERATE**" tag on the operator station.
- Wear work clothes and personal protective equipment.
- Read all instructions and safety instructions in this bulletin and safety labels on your machine.
- Follow local safety regulations and/or laws in your country.
- If you are working with other people, make sure that your signals and communications are fully understandable for additional safety.
- Chock the front and back wheels.

 <p>Figure 1</p>	<ol style="list-style-type: none"> 1. Remove the floor mat by removing the push rivets and discard the push rivets.
 <p>Figure 2</p>	<ol style="list-style-type: none"> 2. Clean the floor mat and operator platform to remove any accumulated mud. 3. Put marks on the floor mat to make holes by measuring the dimensions from circled holes or by using the template provided on page 7.
 <p>Figure 3</p>	<ol style="list-style-type: none"> 4. Make 7mm holes in the marked positions. <p>Note: You can use 6mm diameter Phillips screwdriver instead of using a drill. If you use a drill, please drill from the sponge side of the floor mat so that you can prevent the drill from slipping and drilling in an incorrect location.</p>
 <p>Figure 4</p>	<ol style="list-style-type: none"> 5. Draw a line with a black marker, as shown by dotted line in Figure 4. 6. Cut the floor mat straight along the black line and discard the top section. 7. Reinstall the floor mat and apply 16 new push rivets to the holes to secure the floor mat.